

Iconasys Silver Series Jewelry Turntable Set up Guide



Included with purchase:

- A. Turntable
- B. Master Platform (+4 screws to mount)
- C. 2X Black & 2X White Shooting Platforms
- D. USB Cord
- E. AC Power Adaptor (24V / 2.5A)
- F. 3X Rubber Bumper Feet

Optional Accessories

- G. Hanging Kit (see page 7-9)
- H. Acrylic Riser (see page 10-13)

Hardware Set-up:


[watch unboxing video](#)

1. Install Master Platform on the table (using the 4 screws provided):





2. The Jewelry Turntable includes 4 shooting platforms – 2X black and 2X white. To eliminate platform slipping between turntable start and stop, you will want to place the 3 rubber bumper feet included in package) on the Master Platform.

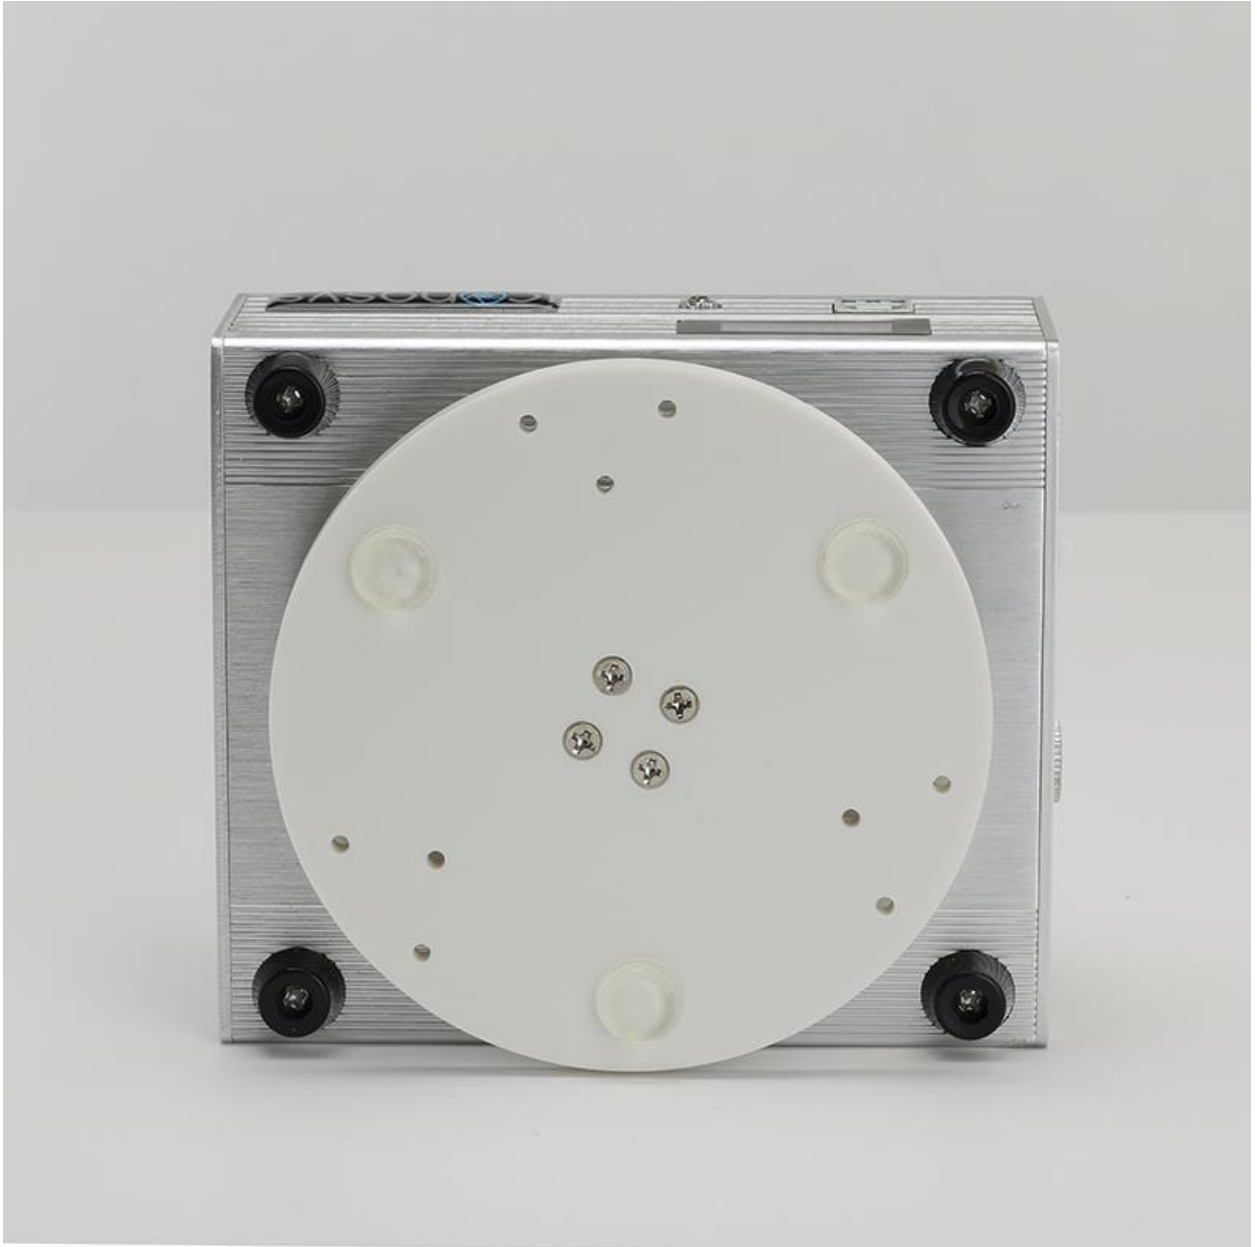

3. Select preferred shooting platform and place on top of the Master Platform.



4. Connect turntable via USB to computer and Power Cord to outlet.
Then power on turntable:



5. Launch Software (see Quick Start Guide)

Optional Accessories continued on next page.

360 Hanging Kit:

- a. Stem Mount (magnet connects to turntable stem)
- b. Hook Mount (ideal for earrings)
- c. Plate Mount (ideal for necklaces and other items)
- d. Plate Mount Screw

1. Suspend turntable in upside down position (this can be done using a piece of foamboard (suggested), wood or any other material).



2. Mount Hook or Plate mount to the Stem. Hook mount will screw directly in to the Stem. For the Plate mount, use the screw provided. Then place object on the hanging kit



Example images of items mounted via hanging kit:



Using hook mount.



Using plate mount

Acrylic Riser/Extender Kit:

- a. 3X Acrylic Riser L Brackets
- b. L Bracket Screws (9 total)
- c. 3X acrylic tops (5", 6.25" & 7.875")
- d. 9" Black and White Tops

The L Brackets mount direct to turntable via screws (3X mounts on turntables – screw holes in triangular position). The L brackets can be used in 2 orientations (tall or long). If only shooting smaller objects <2 x 2", use in the tall position). Ex.



Using L brackets in tall position

For larger objects and for using the 9" Diameter Platforms, the L brackets will be used in the long position. Ex.



Using L brackets in long position

1. Decide on L Bracket orientation and mount to turntable Master Platform using screws provided.



2. Place an acrylic top (or black/white 9" diameter platform) on the L brackets.



Questions? Please reach out to our Technical Support Department (contact options [here](#))